



Item No.	Dimensions (mm)												Fixing Bolts		Bearing	Weight (kg)						
	d	w	w1	a	b	c	g	g2	g4	g5	h	h1	k	m			n	t	u	v	Housing	Cover
BND 3024	120	65	47	370	110	35	60	130	65	65	115	230	2,5	300	60	200	23	35	M20	M10	23024	20
BND 3024	130	68	50	410	120	38	70	136	65	68	130	260	2	340	60	225	23	35	M20	M10	23026	25
BND 3028	140	68	51	430	130	40	70	136	68	68	140	275	3	360	70	235	30	35	M24	M10	23028	35
BND 3030	150	78	57	455	140	42	80	156	71	78	145	290	2	370	80	250	30	35	M24	M12	23030	40
BND 3032	160	78	59	480	150	45	85	156	78	78	155	310	4	390	90	265	30	35	M24	M12	23032	50
BND 3034	170	83	63	510	160	50	90	166	83	83	165	330	2	420	95	285	36	45	M30	M12	23034	55
BND 3036	180	88	66	540	170	52	100	176	88	88	180	360	3	450	100	310	36	45	M30	M12	23036	72
BND 3038	190	93	67	570	180	55	105	186	88	93	185	370	3	480	105	325	36	45	M30	M16	23038	81
BND 3040	200	98	70	600	190	60	110	196	98	98	200	400	3	510	110	340	36	45	M30	M16	23040	100
BND 3044	220	103	78	640	200	65	115	206	103	103	215	430	3	540	115	375	42	52	M36	M16	23044	100
BND 3048	240	108	79	680	210	70	120	216	108	108	225	455	4	560	120	400	42	52	M36	M16	23048	130
BND 3052	260	113	85	720	220	75	130	226	113	113	250	500	4	600	130	440	42	52	M36	M16	23052	160
BND 3056	280	118	91	760	240	80	135	236	118	118	260	520	4	630	140	460	42	65	M36	M16	23056	180
BND 3060	300	133	97	820	250	85	140	266	133	133	285	570	4	690	150	510	42	65	M36	M16	23060	220
BND 3064	320	133	100	860	260	90	150	266	133	133	295	590	4	730	160	530	42	65	M36	M16	23064	287
BND 3068	340	133	110	900	270	95	160	268	143	135	315	630	5	770	170	565	42	65	M36	M20	23068	300
BND 3072	360	138	110	960	280	100	170	276	148	138	330	660	5	820	180	590	42	65	M36	M20	23072	335
BND 3076	380	142	110	1000	300	105	160	284	152	142	340	680	7	680	190	610	56	75	M48	M20	23076	360
BND 3080	400	148	116	1060	320	110	175	296	158	148	360	720	7	720	200	650	56	75	M48	M20	23080	400
BND 3084	420	148	117	1100	340	115	180	296	158	148	375	755	7	940	210	670	56	75	M48	M20	23084	430

**Item Number Suffix:**

**AL** - Housings for shaft end. with end cover, for non-locating bearing.

**AF** - Housings for shaft end. with end cover, for locating bearing.

**BL** - Housings for through shaft, for non-locating bearing.

**BF** - Housings for through shaft, for locating bearing.